

Product Information

Product Model	NSB-C
Product Type	Floor-Wall Expansion Joint Cover/heavy-duty seismic
Material	Aluminum Alloy 6063 T6
Finish	Mill finish

Features and Benefits



Seismic Movement Capability

Designed to accommodate horizontal and vertical movements caused by seismic activity.



Durable Construction

Accommodates different load types, making it a versatile solution for various commercial and industrial settings



Aesthetics

Its sleek aluminum design seamlessly integrates with surrounding structures, maintaining a visually appealing environment.



Easy Installation

Quick and hassle-free installation process with clear instructions provided.



Versatile Weather Endurance


Engineered with corrosion-resistant properties, this expansion joint cover is well-suited for indoor and outdoor applications. For outdoor use, a water barrier must be incorporated to ensure optimal performance.

Maintenance

- > Regularly inspect the expansion joint cover for signs of damage or wear.
- >Clean with mild soap and water as needed to maintain appearance.

Introducing our robust heavy-duty seismic expansion joint cover profile designed for areas that experience high traffic loads, such as private car parking areas and back-of-house spaces with trolley movements. This specially engineered expansion joint system provides optimal durability and performance while seamlessly accommodating various heavy-duty loads.

Code	Gap width A(mm)	Visible width B(mm)	Installation height C(mm)	Installatio width D(mm)	on Thermal movement (mm)	Siesmic movement (mm)	Load Capacity
NSB 100C	100	177	31	205	70mm (+35 -35)	120mm (+50 -70)	Private Vehicles
NSB 150C	150	227	31	255	70mm (+35 -35)	130mm (+50 -80)	Private Vehicles
NSB 200C	200	277	31	305	70mm (+35 -35)	150mm (+50 -100)	Private Vehicles
NSB 250C	250	327	31	355	70mm (+35 -35)	180mm (+50 -130)	Private Vehicles
NSB 300C	300	377	31	405	70mm (+35 -35)	200mm (+50 -150)	Private Vehicles

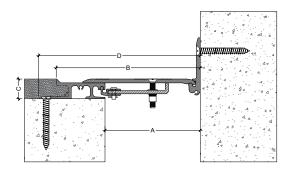





Length	Standard length: 3 meters.		
Fire Rating	ASTM E84 Class A.		
Installation	: Please follow the installation instructions provided in the J-CAP installation guide.		

