

# Product Information

Product Model	NSP		
Product Type	Floor Expansion Joint Cover/heavy-duty seismic Profile		
Material	Aluminum Alloy 6063 T6		
Finish	Mill finich		

# Features and Benefits

#### Seismic Movement Capability

Designed to accommodate horizontal and vertical movements caused by seismic activity.

#### **Installation Height**

Designed to be installed directly above finished flooring surfaces.

# Versatility

Accommodates different load types, making it a versatile solution for various commercial and industrial settings.

### Aesthetics

Its sleek aluminum design seamlessly integrates with surrounding structures, maintaining a visually appealing.

### Easy Installation

Quick and hassle-free installation process with clear instructions provided.



#### Versatile Weather Endurance

Engineered with corrosion-resistant properties, this expansion joint cover is well-suited for indoor and outdoor applications. For outdoor use, a water barrier must be incorporated to ensure optimal performance.

## **Maintenance**

- > Regularly inspect the expansion joint cover for signs of damage or wear.
- > Clean with mild soap and water as needed to maintain appearance.

Introducing our robust heavy-duty seismic expansion joint cover profile designed for areas that experience high traffic loads, such as private car parking areas and back-of-house spaces with trolley movements. This specially engineered expansion joint system provides optimal durability and performance while seamlessly accommodating various heavy-duty loads.

Code	Gap width A(mm)	Visible width B(mm)	Thermal movement (mm)	Siesmic movement (mm)	Load Capacity
NSP 100	100	260	130mm (+80 -50)	150mm (+100 -50)	Private Vehicles
NSP 150	150	310	130mm (+80 -50)	200mm (+100 -100)	Private Vehicles
NSP 200	200	360	130mm (+80 -50)	250mm (+100 -150)	Private Vehicles
NSP 250	250	410	130mm (+80 -50)	300mm (+100 -200)	Private Vehicles
NSP 300	300	460	130mm (+80 -50)	350mm (+100 -250)	Private Vehicles







Length	Standard length: 3 meters.	
Fire Rating	ASTM E84 Class A.	
Installation	Please follow the installation instructions provided in the J-CAP installation guide.	

