



I Product Information

Product Model	SYRR
Product Type	Wall Expansion Joint Cover/Pan Seismic Profile
Material	Aluminum Alloy 6063 T6, EPDM Rubber Gaskets
Finish	Mill finish
Gasket colors	Black, Grey, Beige

SYRR Seismic Expansion Joint Cover is designed to provide a seamless and aesthetically pleasing solution for seismic expansion joints. This unique profile perfectly complements the SZP floor seismic profile, ensuring a cohesive and harmonious appearance. It features an aluminum center plate that can be powder-coated to match your desired wall finish, enhancing the overall aesthetics of your space.

Features and Benefits



Seismic Movement Capability

Designed to accommodate horizontal and vertical movements caused by seismic activity.



Durable Construction

Made from high-strength aluminum alloy for exceptional durability and long service life.



Streamlined Aesthetics

The low-profile design, coupled with multiple gasket color options, seamlessly enhances aesthetics while preserving functionality.



Easy Installation

Quick and hassle-free installation process with clear instructions provided.



 
Versatile Weather Endurance

Engineered with corrosion-resistant properties, this expansion joint cover is well-suited for index and outdoor an

Maintenance

- > Regularly inspect the expansion joint cover for signs of damage or wear.
- >Clean with mild soap and water as needed to maintain appearance.

Code	Gap width A(mm)	Visible width B(mm)	Installation height C(mm)	Installation width D(mm)	Total movement (mm)	Siesmic movement (mm)
SYRR 50	50	294	25	344	50mm (+25 -25)	135mm (+100 -35)
SYRR 100	100	344	25	394	50mm (+25 -25)	155mm (+100 -55)
SYRR 150	150	394	25	444	50mm (+25 -25)	205mm (+100 -105)
SYRR 200	200	444	25	494	50mm (+25 -25)	255mm (+100 -155)
SYRR 250	250	494	25	544	50mm (+25 -25)	305mm (+100 -205)
SYRR 300	300	544	25	594	50mm (+25 -25)	355mm (+100 -255)
SYRR 400	400	644	25	694	50mm (+25 -25)	455mm (+100 -355)







Length	Standard length: 3 meters.	
Fire Rating	ASTM E84 Class A.	
Installation	Please follow the installation instructions provided in the J-CAP installation guide.	

